


Connections for the Turntable to the k84 Decoder


Please note that the **correct address** must be set on the decoder. This address consists of a particular group of settings for the decode switches on the k84 decoder **and** the use of **particular** outputs on the k84 decoder.

Four consecutive addresses can accordingly always be accessed on a k84 decoder.
During the configuration process for the turntable you can read the appropriate switch settings and the outputs to be used on the k84 decoder after you have selected the corresponding group of switches (8 switches for the k84 decoder) and then transfer the settings to the decoder.


The Outputs on the k84 Decoder

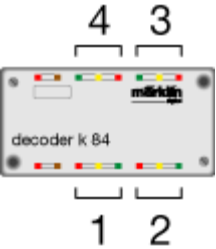

The Connections for the Turntable to the k84 Decoder,
here at Outputs 1 and 2.

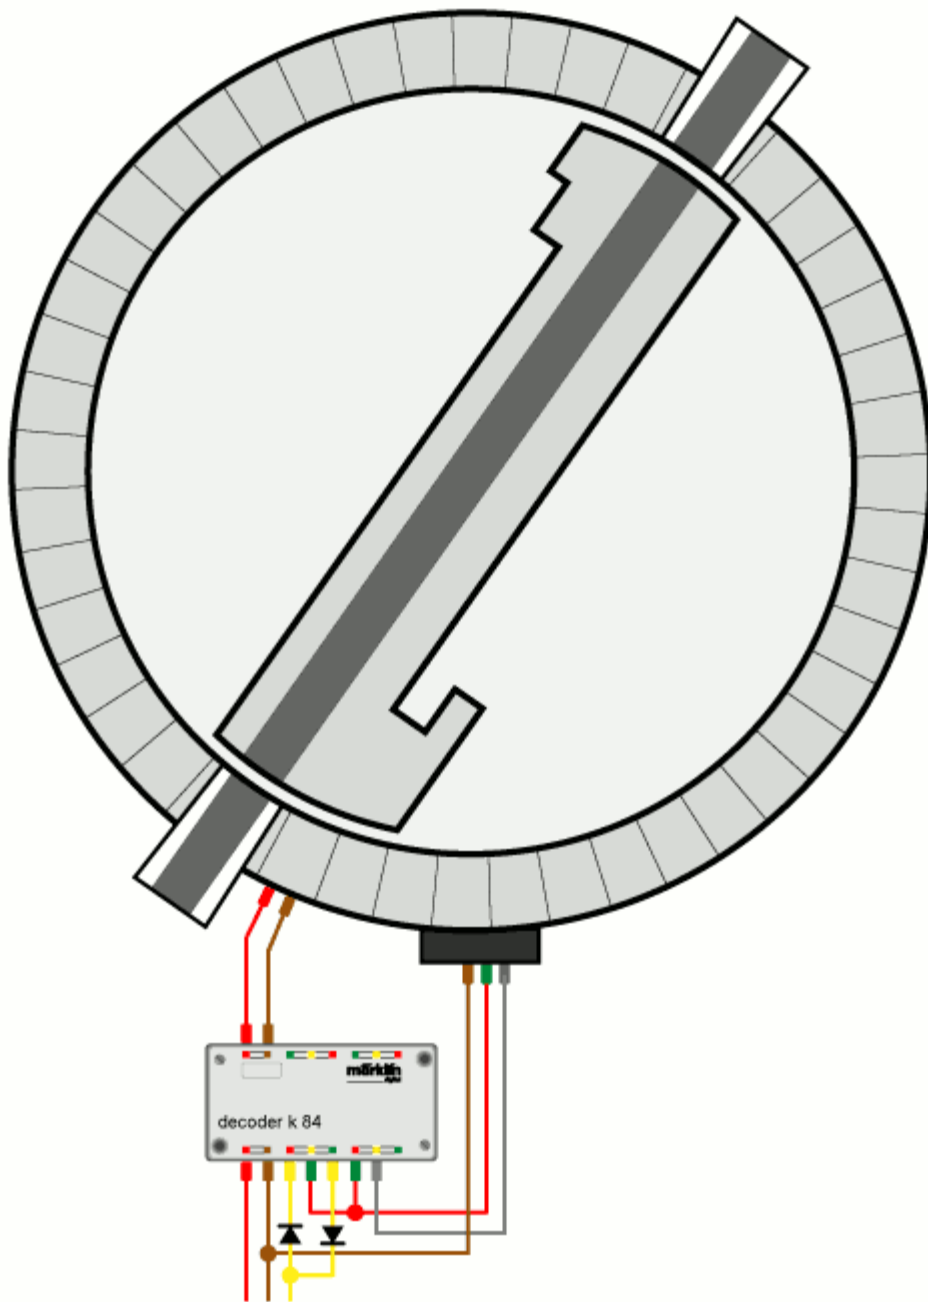

The Connections on the k84 Decoder in Detail.

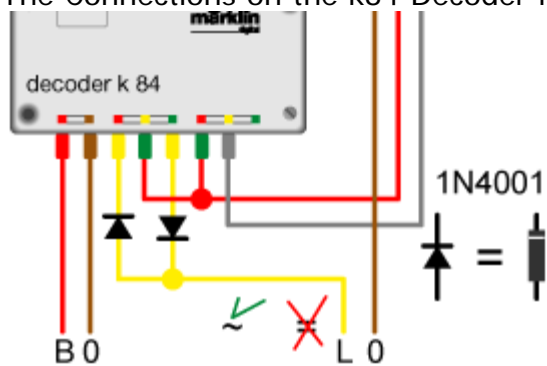

Go back to the configuration for the [Turntable](#)